


SE - Monteringsanvisning av torklinor



Linsatsen består av följande detaljer:

- Väggbeslag, enkelt 8st
- Väggbeslag, dubbelt 8st
- Lina (plastbelagd stålwire) 90m
- Distansclips 50st
- Monteringsanvisning för torklinor

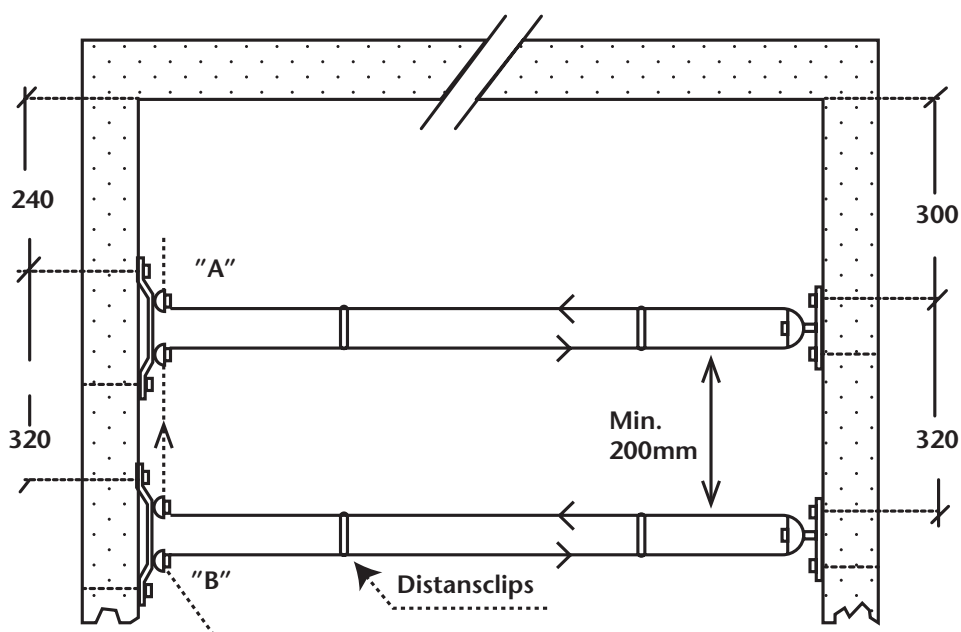


- Montera beslag och lina enligt måttskissen ovan eller jämnt fördelat i rummet.
- Monteras ca. 1,8m över golv.
- Montera linorna i blåsriktningen så att luften lätt kan cirkulera.
- För fastsättning av beslagen kan skruvar med plastplugg användas. OBS! Viktigt att beslagen sitter ordentligt fast.
- Om väggarna är av dåligt material kan träreglar behöva sättas upp för att montera på.
- Då beslagen har satts upp skall de halvrunda spännlåsen vara utskruvade så långt som möjligt för att kunna eftersträcka linan.
- Drag linan genom beslagen som pilarna ovan visar. Se till att linan löper lätt.
- Lås fast linan genom åtskrivning av spännlåset "A".
- Sträck upp linan och lås fast med spännlåset "B".
- Eftersträck sedan linan genom tillskrivning av samtliga spännlås.
- Montera distansclips på linorna med ca. 1 meters mellanrum.

GB - Assembly instructions for dryingwires

The set of wires includes following parts:

- Wall bracket, single 8 pcs.
- Wall bracket, double 8 pcs.
- Wire (plastic-covered) 90 m.
- Spacer clips 50 pcs.
- Assembly instructions

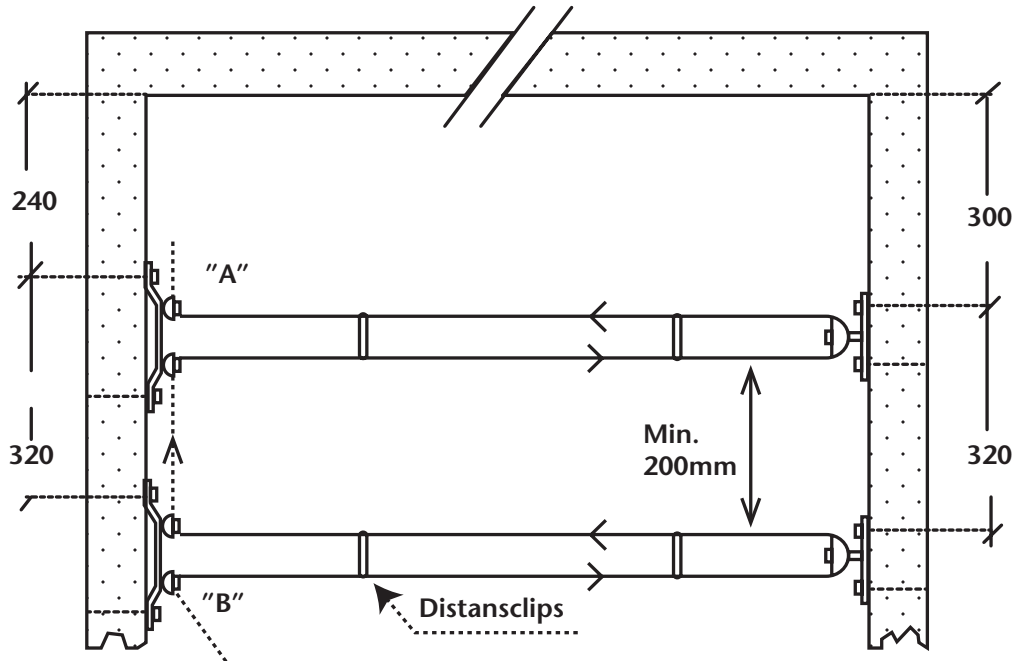

- Assemble the wall brackets and the wire according to the sketch above or so that they are evenly spaced across the room.
- The height above the floor shall be appr. 1,75 m should be approx. 1.8 m.
- Install the wires parallel to the air flow so that the air can circulate easily.
- For assemblage of tThe brackets can be installed using screws with plastic plugs be used.
NOTE! It is important that the brackets are securely installed.
- If the walls are in poor condition it may be necessary to fix the wooden frame to the walls and install the brackets on the frames.
- When the brackets have been put up, shall the halfround tighten-locksunscrew the tensioners be into their outermost positions. So the wire can be tightend,so that the wires can be tightened afterwards.
- Pull the wire through the brackets like as shown by the arrows above shows. Make sure the wire runs freely.
- Tighten the screw at wall bracket "A" and to secure the wire will be fixed.
- Stretch the wire and fix with the tighten-looktensioner ""B".
- Stretch the wire afterwards. Tighten all thighten-looksby tightening all the tensioners.
- Assemble Fit the distanceclips spacer clips on the wire. They shall be place with a distance of appr. 1 m should be spaced around 1 m apart.